

Change the number of rings before voice mail will answer

- 1) Press [FEATURE] **266344
- 2) Enter Password: 23646
 Display will read: **“Terminals & Sets”**
- 3) Press **SHOW** (top right hand arrow) once
 Display will read: **“Show set: __”**
- 4) Enter the extension you would like to change
- 5) Press **SHOW** (top right hand arrow) once
 Display will read: **“Capabilities”**
- 6) Press **SHOW** (top right hand arrow) once
 Display will read: **“Call Forward No Answer”**
- 7) Press **SHOW** (top right hand arrow) once
 Display will read: **“Forward to: 500”**
- 8) Then press **NEXT** (bottom right hand arrow)
 Display will read: **“Forward delay: __”**
- 9) Press **CHANGE**
- 9) Enter the correct delay time (2, 3, 4, 6, 10), then press **Heading** (Top Left hand arrow)
- 10) Press [RELEASE] to end the programming session



(Feature Key)



(M7310 & M7324 Overlay)

Additional Button Programming

Autodial Buttons – External Dial

Press Feature * 1
 Press the button that you wish to program
 Enter phone number
 Press OK

Autodial Buttons – Intercom Dial


Press Feature * 2
 Press the button that you wish to program
 Dial the extension number.

Feature Buttons

Press Feature * 3
 Press the button that you wish to program
 Press Feature and code.

Button Inquiry

Press Feature * 0
 The display will show what is programmed
 on a button as it is pressed.
 Press Intercom to view the extension

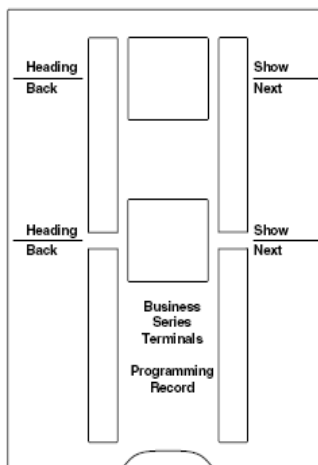

(T7316 & T7316E)