

**CHANGING TIME / DATE**  
**For NORSTAR 3x8 / 6x16 / 8x24**

Press

**Feature \*\* ADMIN (23646)**

Password **ADMIN (23646)**

1. Sys speed dial: **Next**

2. Names: **Next**

3. Time & Date: **Show**



Time: 12:00 AM **Change**

Hour: 12:

Next **Change**

**Next**

Minutes: 00

Next **Change**

**Next**

A.M. **Change**

**Next**

Date: 17 Mar 14 **Change**

Year: 14

Next **Change**

Month: 03

Next **Change**


Day: 17

Next **Change**

**RLS**



(M7310 & M7324 Overlay)

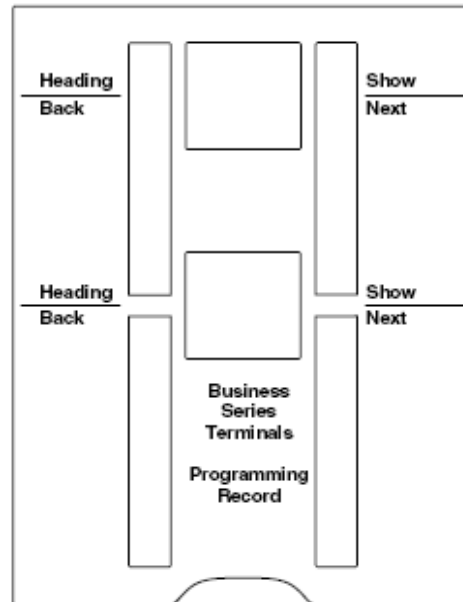

(T7316 & T7316E)

**Additional Button Programming**

*Autodial Buttons – External Dial*

Press Feature \* 1

Press the button that you wish to program

Enter phone number

Press OK

*Autodial Buttons – Intercom Dial*

Press Feature \* 2

Press the button that you wish to program

Dial the extension number.

*Feature Buttons*

Press Feature \* 3

Press the button that you wish to program

Press Feature and code.

*Button Inquiry*

Press Feature \* 0

The display will show what is programmed on a button as it is pressed.

Press Intercom to view the extension