




.....

M7310
Telephone
User Card



For Service Call
403-274-7774

Your Norstar M7310 telephone

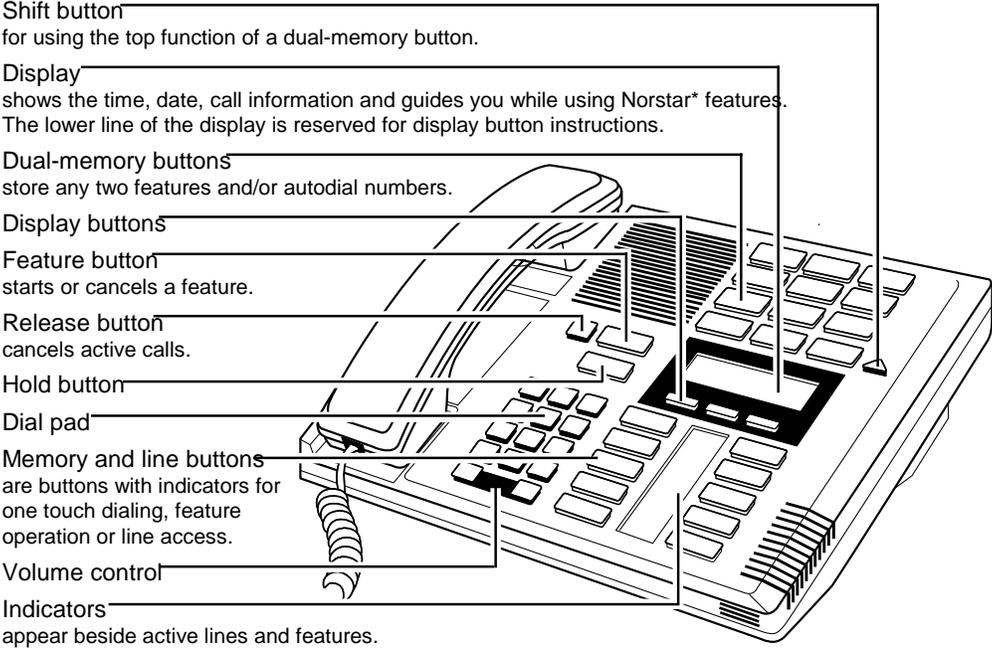

Using display buttons Display buttons change with each feature you use. The labels for display buttons appear in capital letters directly above them on the second line of the display. A display button with an "OK" label above it is represented as in this card.

Contrast level 2
DOWN UP OK

Button inquiry Confirm that your memory and line buttons have the correct snap-on caps by checking their programming.

1. Release all calls or open lines with dial tone.
2. Press **f***.
3. Press the button(s) you want to check and read the display.
4. Press **f** when finished.

Adjusting display contrast 1. Press **f†**.

2. Press **UP** or **DOWN** for the level you want.
3. Press **OK** when finished.

Selecting a ring type and volume level 1. Press **f†**.

2. Press **/**, **^**, **<** or **>** to hear the different types of rings.
3. While the telephone is ringing, press **softer** or **louder** to adjust the volume.
4. Press **OK** to store the ring.

Important: All M7310 telephones Release 16 (REL 16) and higher comply with the Americans with Disabilities Act (ADA). See the label on the bottom of the telephone for the Release marking.

* Meridian and Norstar are trademarks of Northern Telecom.

Making calls

About line buttons Norstar systems can have different types of line buttons. Match the line buttons on your telephone with the ones below for instructions on how to use them.

△
Line 1

<p>Internal calls using Intercom buttons</p> <ol style="list-style-type: none"> 1. Pick up the receiver. 2. If ° appears beside an Intercom button, then dial. <p>OR</p> <p>Press an Intercom button without °, then dial.</p>	<p>External calls using numbered Line buttons</p> <ol style="list-style-type: none"> 1. Pick up the receiver. 2. When ° appears beside a numbered Line button, then dial. <p>OR</p> <p>Press a numbered Line button without °, then dial.</p>
--	---

Note: Internal numbers are supplied by your System Coordinator.

└ 4321

<p>Internal calls using extension buttons</p> <ol style="list-style-type: none"> 1. Pick up the receiver. 2. When ° appears beside an extension button, then dial. 	<p>External calls using extension buttons</p> <ol style="list-style-type: none"> 1. Pick up the receiver. 2. When ° appears beside the extension button, then dial (or your system's external line access code) and the number.
--	---

Holding Calls

1. Press °. The ° flashes beside the line on hold.
2. Press the line button with the flashing ° to return to the call. Check the display for confirmation or additional information.

Automatic hold

Calls are put on hold automatically when you switch from one line to another.

©

This button operates the telephone's built-in microphone and speaker in place of the receiver. Your System Coordinator can program Handsfree to your telephone.

Making calls

1. Press © instead of picking up the receiver.

Switching between Handsfree and handset

1. Press © and replace the handset to switch to Handsfree.
2. Pick up the receiver to switch back.

Using Mute


1. Press © to turn the microphone OFF.
2. Press © again to turn the microphone ON.

Dialing without lifting the handset

1. Press a line button without ° then dial your call.
2. When answered, pick up the receiver, or press ©.
3. If the call is not answered, or the line is busy, press ©.

Programming memory buttons

About memory buttons

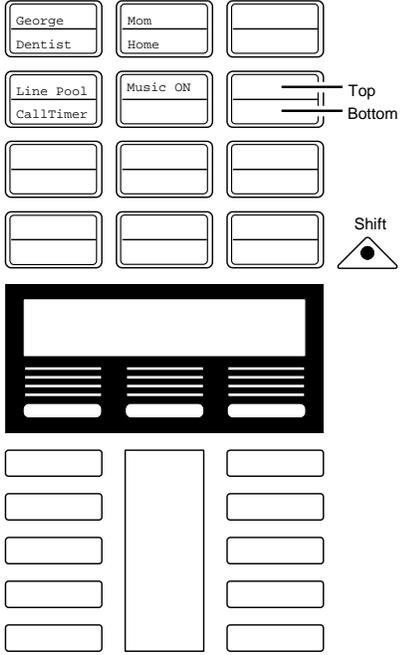

There are two types of memory buttons: single-memory and dual-memory. Memory buttons store telephone numbers or feature codes to give you one touch dialing or feature activation.

Dual-memory buttons
 To use the bottom function, press the dual-memory button.
 To use the top function, press the shift button, then press the dual-memory button.

Single-memory buttons
 Single-memory buttons are the buttons with indicators other than line or Handsfree buttons.

Remember: Press **f*** to check a memory or line button.

Programming memory buttons

- | | |
|--|--|
| <p>External autodial</p> <ol style="list-style-type: none"> If you are on a call or an open line with dial tone, press or®. Press f*/. Press a memory button. Dial the external number. Press OK to store the number. Label your new button. | <p>Internal autodial</p> <ol style="list-style-type: none"> If you are on a call or an open line with dial tone, press or®. Press f*□. Press a memory button. Dial the internal number. Label your new button. |
|--|--|

- | | |
|--|--|
| <p>Features</p> <ol style="list-style-type: none"> If you are on a call or an open line with dial tone, press or®. Press f*◀. Press a memory button. Press f and the feature code. Label your new button. | <p>Erasing memory buttons</p> <ol style="list-style-type: none"> If you are on a call or an open line with dial tone, press or®. Press f*/. Press the memory button you want to erase. Press OK to erase the button. |
|--|--|